



Strip Door Installation Instructions

Step 1 | Attach wall mount or jamb mount hardware to the doorway using appropriate fasteners.

NOTE: If needed, cut hardware with a hacksaw or band saw. Cut from the shortest length provided.

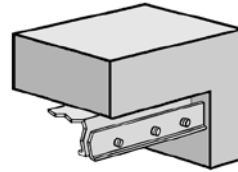


Jamb Mount

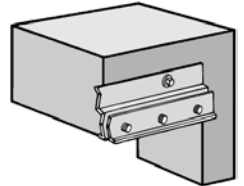


Wall Mount


Step 2 | Hang the strips on the mounting studs.

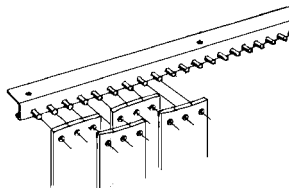


6" Strips - 67% Overlap

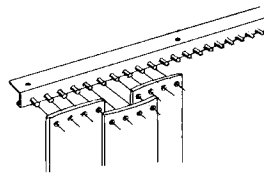


8" Strips - 50% Overlap

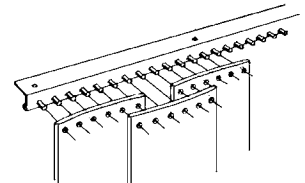


12" Strips - 67% Overlap

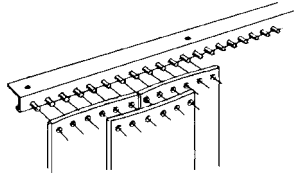

12" Strips - 100% Overlap

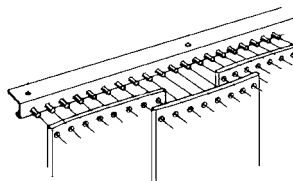

16" Strips - 50% Overlap

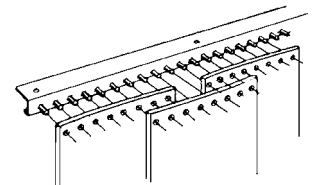

16" Strips - 75% Overlap

NOTE: Hang strips in two rows using the spacing shown. First hang a back row followed by a front row. Pay attention to strip curvature. Place strips with concave sides facing each other.

Doors with Standard 12" wide strips have orange strips on each side.

Allow strips to hang out for 24 hours before cutting to final length (if required). Wall mount strips are shipped 4-6 inches longer than the specified door height. Jamb mount strips are 1-2 inches longer.

Adjust the overlap on the outstrips as required to suit the door.

Step 3 | Install retainer bars and nuts to secure strips to mounting hardware.

