PVCSTRIP.COM

Snap Strip
Installation Instructions

Getting Started:

Mounting Cap Lock Pin · Mounting Screw · Mounting Bar · Mounting Bar Cap · Mounting Pin · Mounting Hole · Pre-Punched PVC Strip · Sticker · Drill Bit

1. **Remove the Mounting Bar. Do not remove the PVC strips from the carton until ready for installation.**

   NOTE: When multiple strip doors are ordered, all carton(s) will be properly tagged. All strip doors are shipped complete with the following:

   (1) 40" Mounting Bar

   (5) 3/16" x 1-1/4" Mounting Screws

   (1) 1/8" Drill Bit

   Pre-Punched PVC Strips.
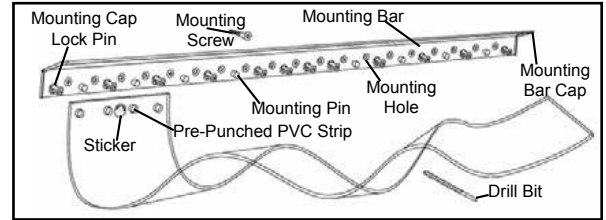
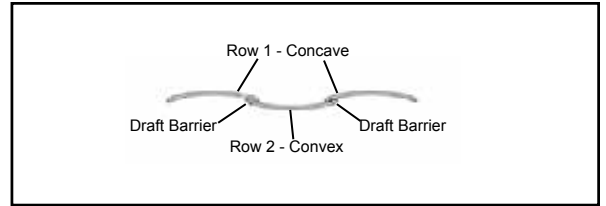**First | Attach the Mounting Bar:**

   IMPORTANT: Install your PSD on the inside or interior of the doorway.

1. **Temporarily attach a PVC strip to both ends of the Mounting Bar.**
2. **Center and level the bar above the opening so the strips are 3/8" above the floor.**
3. **Mark lines on both sides of the Mounting Bar and under the Bar between the PVC strips.**
4. **Remove the PVC strip, replace the bar along the lines and mark five evenly spaced mounting holes.**
5. **Drill all five pilot holes with a 3/16" bit (Drill Bit is included with five Mounting Screws).**
6. **Attach the Mounting using the five supplied Mounting Screws.**

3/8" above the floor

Use either a drill with a screw driver bit...
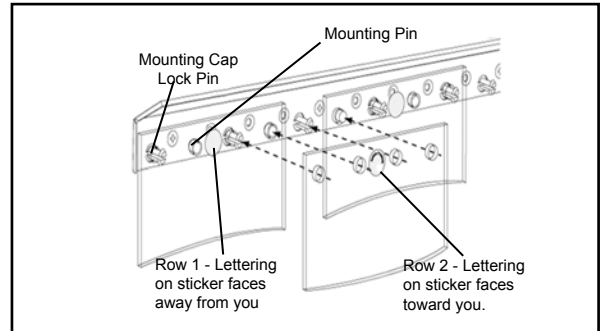
...or a screw driver
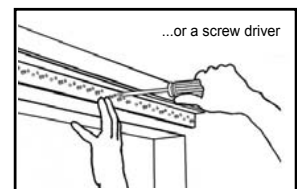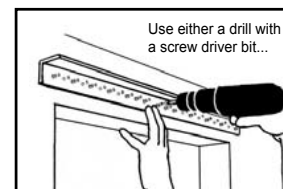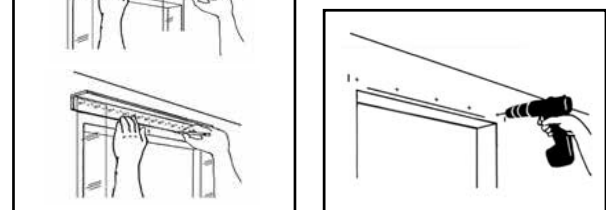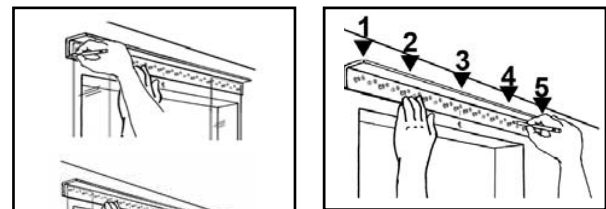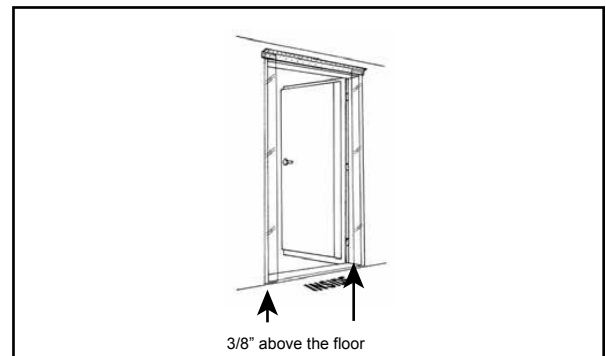
Second | Hang the PVC Strips:

IMPORTANT: All PVC strips have a natural curve across the width of the material. When hung properly (row 1: concave - row 2: convex), it creates a barrier against drafts.

Row 1 - Concave
Draft Barrier
Row 2 - Convex
Draft Barrier

Stickers have been applied to each PVC strip. Attach each PVC Strip by pushing the pre-punched holes over the Mounting Pins and the Mounting Cap Lock Pins on the Mounting Bar.
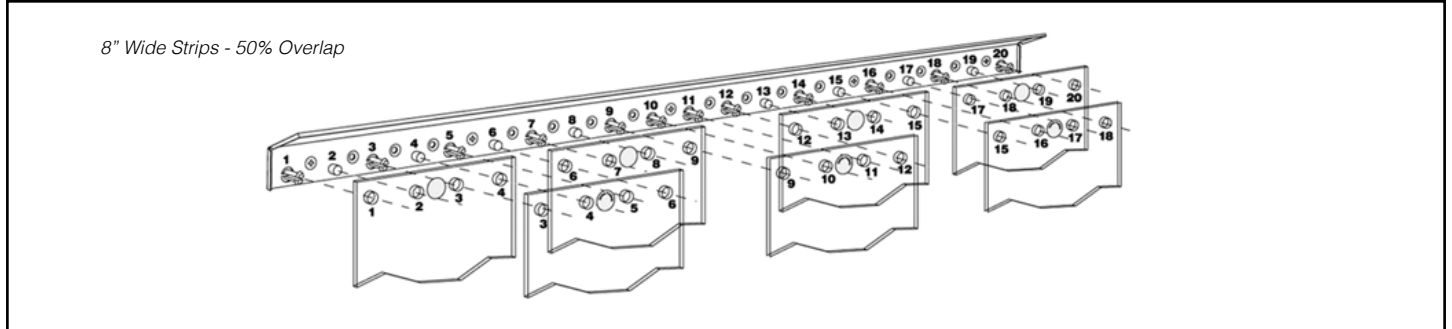

Mounting Pin
Mounting Cap Lock Pin
Row 1 - Lettering on sticker faces away from you
Row 2 - Lettering on sticker faces toward you.

IMPORTANT:

First row strips: Lettering on the sticker should face away from you.

Second row strips: Lettering on the sticker should face toward you.

First row strips

Second row strips
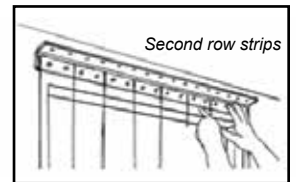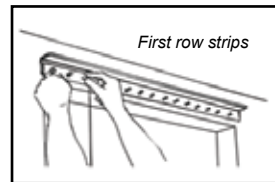
Overlap Configuration

8" Wide Strips - 50% Overlap

Third | Close the Cap

1. **Push the Mounting Bar Cap Shut.**